

Petite Greenhouse Manual



Tools Needed:

- Cordless Drill (12V or higher)
- #2 Square Drive Bit
- Hammer
- Tape Measure
- Speed Square
- 1/4" socket drive bit



Little Cottage Co.®
PO Box 455
Berlin, OH 44610
330-893-4212
www.cottagekits.com

© 2015 Little Cottage Co.

Petite Greenhouse Manual



1



Lay all pieces of the kit out, keeping the similar pieces together.

2



Set the back wall onto the floor.

3



Make sure the back wall is square to the floor and fasten using 2 1/2" screws.

4



repeat on the opposite side of the wall.

5



Set the front wall onto the floor.

6



Make sure the front wall is square to the floor and fasten using 2 1/2" screws.

Petite Greenhouse Manual



7



Make sure door opening measures same on bottom as the top before fastening other end.

8



Set a side wall onto the floor.

9



Make sure the side wall is tight to the floor.

10



Fasten the sidewall to the floor using 2 1/2" screws. And do the same to the second sidewall.

11



Fasten the sidewall to the front wall using 2 1/2" screws.

12




Fasten the side-wall to the back wall using 2 1/2" screws.

Petite Greenhouse Manual



13

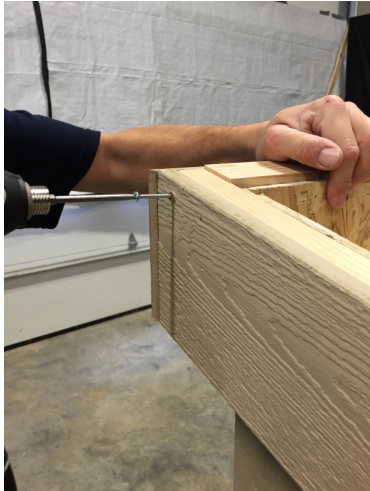

Fasten the outside of the walls together using screws.

14



Fasten at each corner.

15



Fasten siding on corners and along bottom using 1 1/4" screws.

16



Place one of the support beams onto the marked areas.

17



Fasten using 2 1/2" screws. And do the same to the opposite side.

18



Place one of the center support beams to onto the marked areas.

Petite Greenhouse Manual



19




Fasten using 2 1/2" screws. And do the same for the second side center support beam.

20



Place both shelves onto the support beams.

21

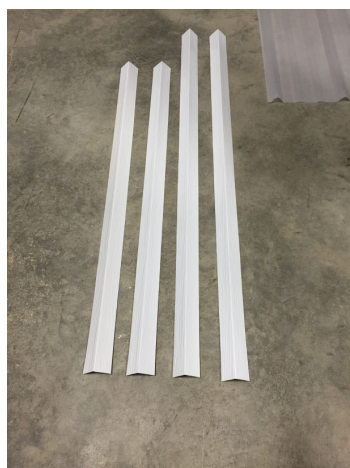

Pictured is the corner trim for the Petite Greenhouse.

22



Attach the trim to the corners of the greenhouse using white aluminum nails.

23



Place the roof purlin onto the marked area.

24



Fasten using 2 1/2" screws. Fasten the opposite side in the same manner.

Petite Greenhouse Manual



25



Pictured is the fastened roof purlin.

26



Lay one of the roof sheets onto the roof frame.

27



Before fastening the roof sheeting, attach the foam sealer onto the roof corresponding to the ridges in the roof sheeting.

28



Trim away any excess foam.

29



Make sure the roof sheeting measures one inch past the bottom of the trim.

30



Attach using 1" white screws where holes are drilled in the roof.

Petite Greenhouse Manual




31




Place the corner trim to the outside of the roof.

32

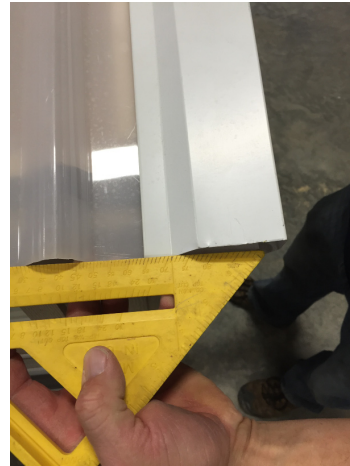

Be sure the corner trim and roof sheeting are square.

33

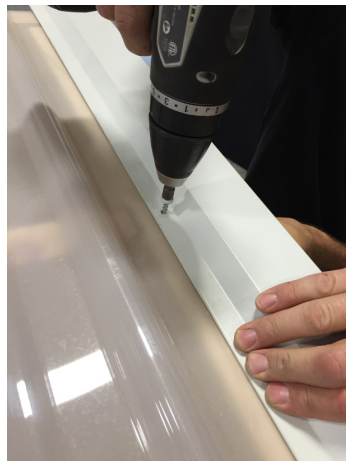

Attach the corner trim using 1" white screws 3 on top and 3 on the side.

34



Attach the foam lining to the top of the roof sheeting at the front of the greenhouse, trimming away any excess foam.

35



Place the front piece of corner trim onto the greenhouse.

36




Be sure that the drip edge pieces align completely before fastening.

Petite Greenhouse Manual



37

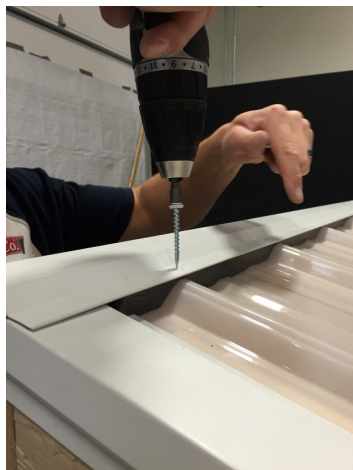

fasten the top side of the drip edge piece to the roof using 2” screws on all of the roof ridges and on each end.

38



Do the same to fasten the front side using 1” screws.

39



Congratulations! You have completed the assembly of the Petite Greenhouse! Thanks again for choosing Little Cottage Company, we greatly appreciate it! We hope you enjoy your structure for many years to come!

40



Pictured is the completed Petite Greenhouse, the back view.